


DIP SWITCH SETTINGS : DIP-Switch: UP = ON / DOWN = OFF

Cycle power for DIP-switch changes to take effect!

Switch 8: Always OFF!

Switch	1	2	3	4
Panel 1	N/A			
Panel 2		On		
Panel 3	On	On		
Panel 4			On	

Switch	6	7
9.6 K	Off	Off
19.2 K	On	
38.4 K		On
57.6 K	On	On

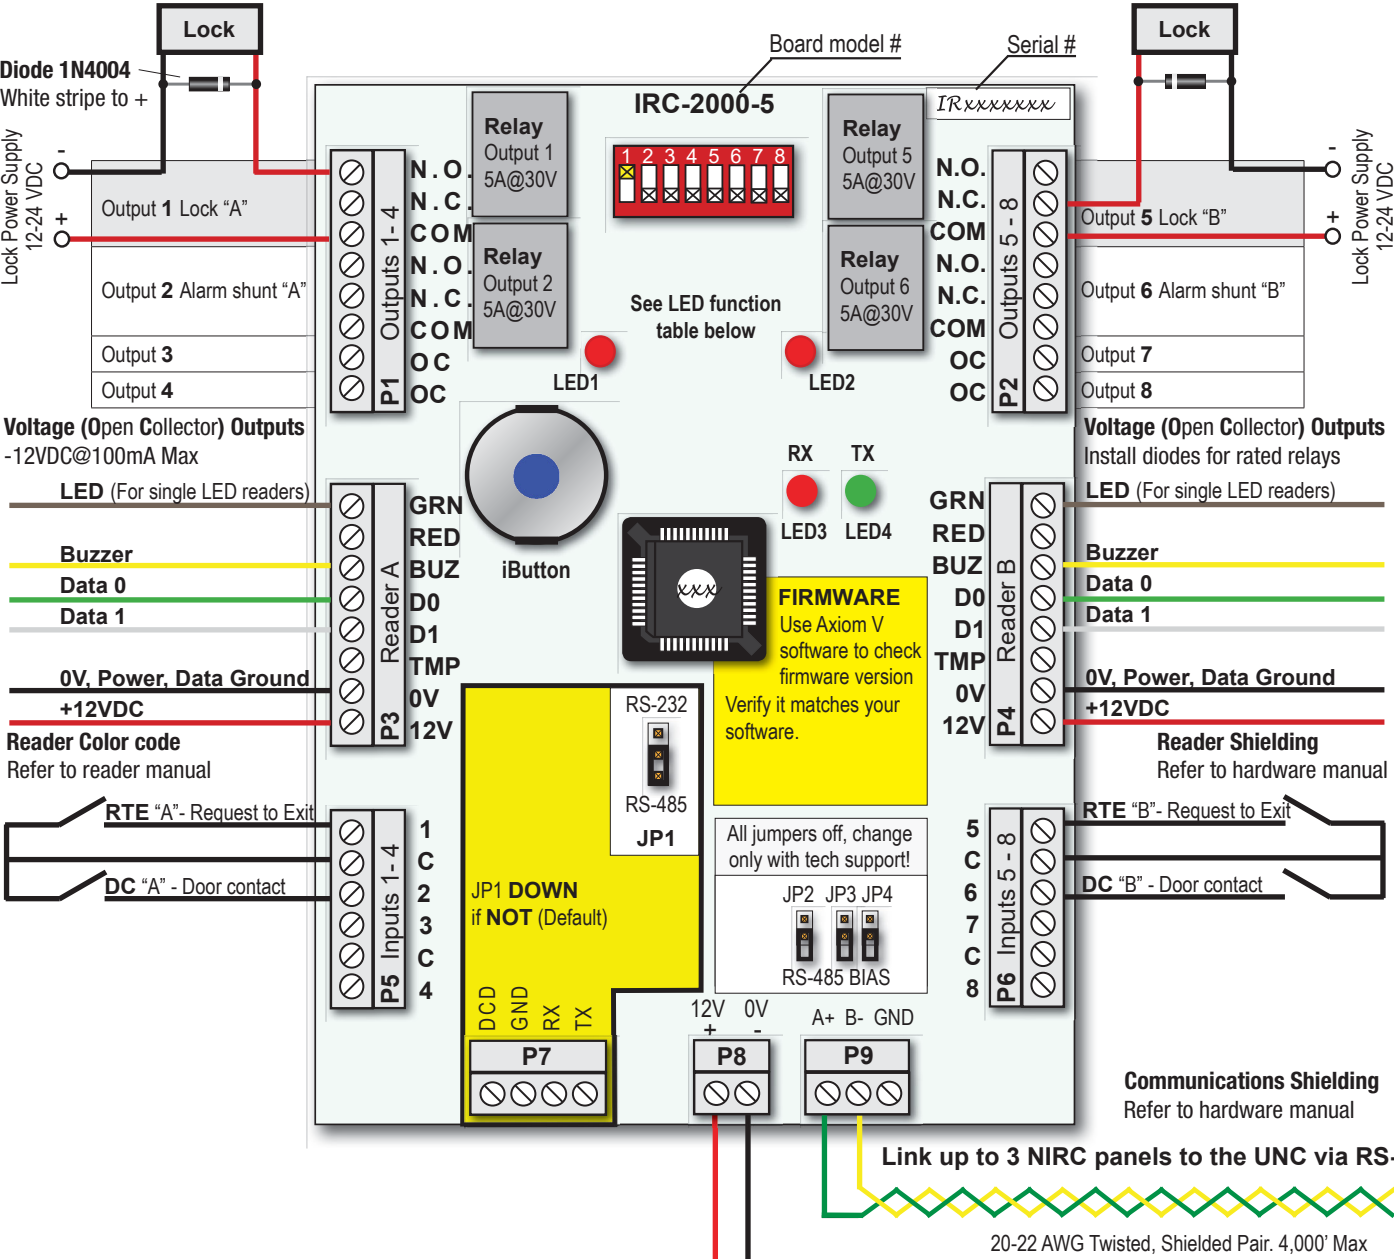

Panel LEDs

Panel LEDs	LED1 (Red)	LED2 (Red)	LED3 (Red)	LED4 (Green)
FUNCTION	Door forced	Host	Receive	Transmit
OFF	No	Power is off	Host not polling	Panel not responding
ON SOLID	Yes	Online	Malfunction	Malfunction
BLINKING	Card read	Offline	Receiving	Transmitting

Power Supply (PS-1224) LEDs

Press "BAT. TEST" button on PS-1224 for battery test, Yellow LED will go ON if test failed

LED	On	Off
Green LED	Power On	Power Off
Red LED	Shorted	OK
Yellow LED	Battery Fail	Battery OK

