


DIP SWITCH SETTINGS : DIP-Switch: UP = ON / DOWN = OFF

Cycle power for DIP-switch changes to take effect! Switch 8: Always OFF!

Switch	1	2	3	4	5
Panel 1	N/A				
Panel 2		On			
Panel 3	On	On			
Panel 4			On		

Switch	6	7
9.6 K		
19.2 K	On	
38.4 K		On
57.6 K	On	On

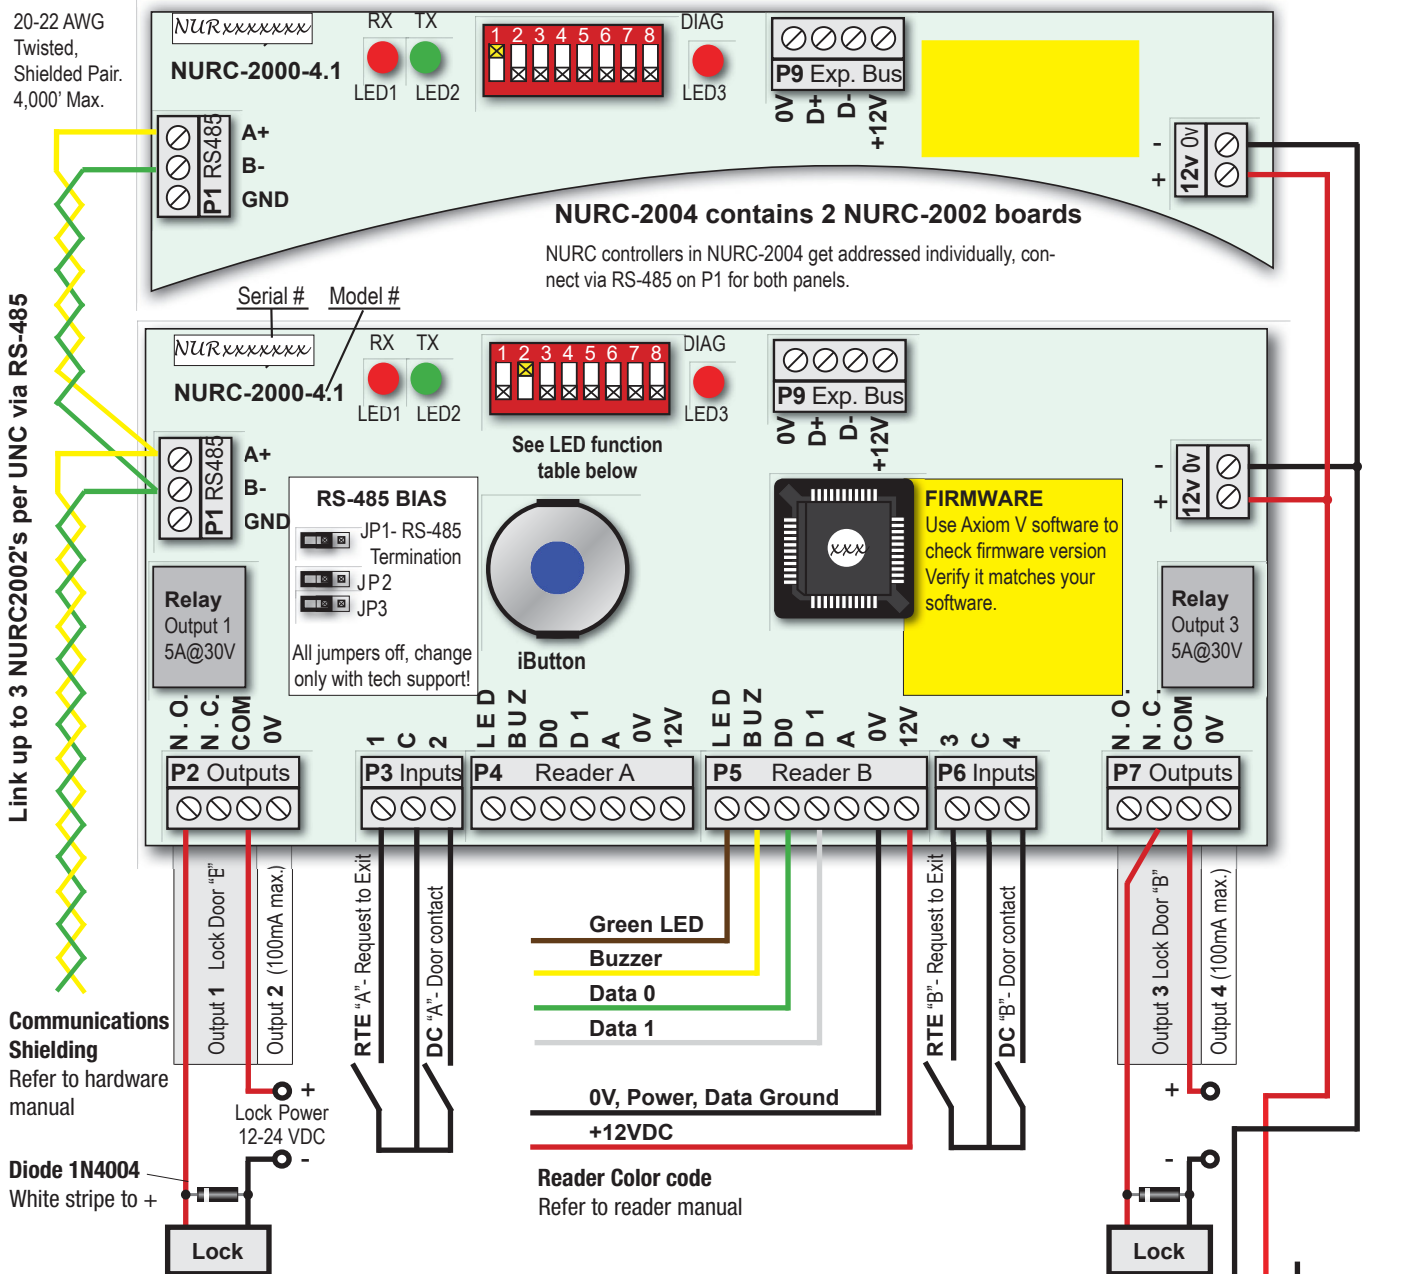

Panel LEDs			
Panel LEDs	LED1 (Red)	LED2 (Green)	LED3(Red)
FUNCTION	Receive	Transmit	Host
OFF	Host not polling	Panel not responding	Power is off
ON SOLID	Malfuction	Malfuction	Online
BLINKING	Receiving	Transmitting	Offline

Power Supply (PS-1224) LEDs			
Press "BAT. TEST" button on PS-1224 for battery test, Yellow LED will go ON if test failed			
LED	On	Off	
Green LED	Power On	Power Off	
Red LED	Shorted	OK	
Yellow LED	Battery Fail	Battery OK	

For Support Call : (+44)1386 425810

All software and hardware manuals are included on Axiom V software CD in "Documents" folder

Web site : www.rbhsecuritygroup.com E-mail : support.uk@rbh-access.com

NURC-2002

NURC-2004

Universal Reader Controller with ENCL1 enclosure and PS-1224 power supply

